


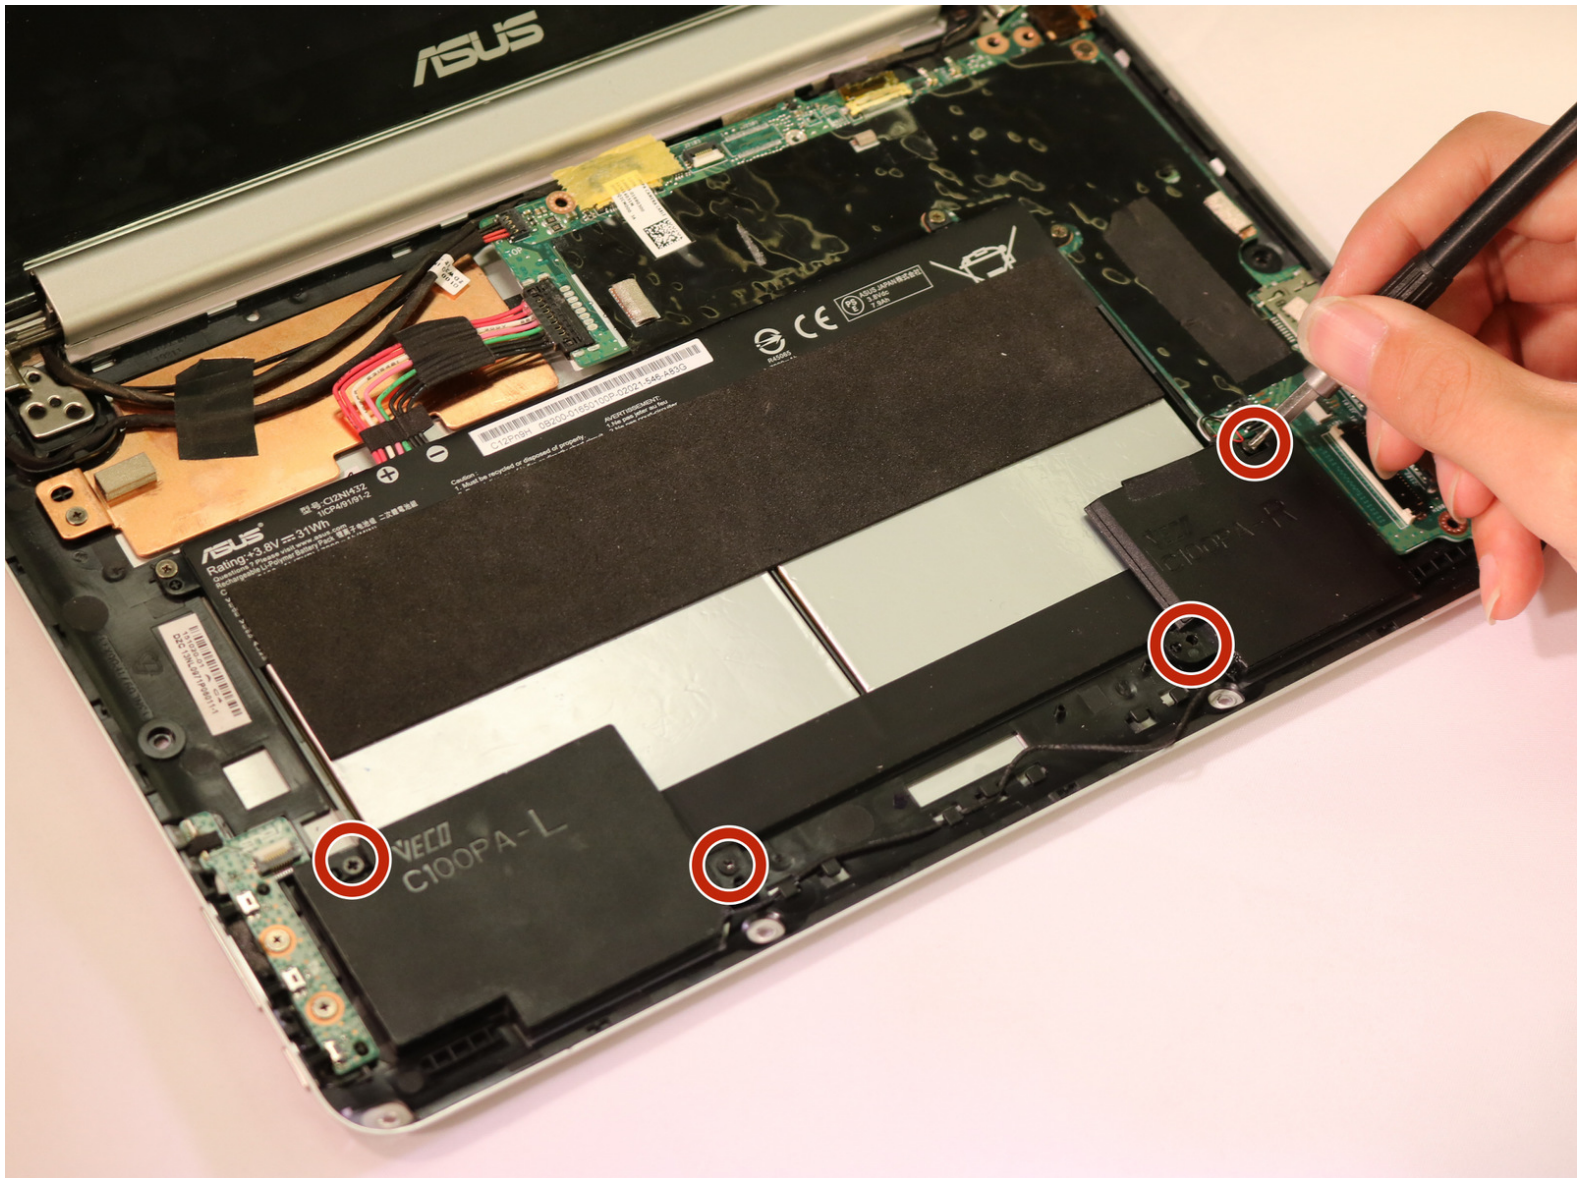

Asus Chromebook Flip C100P Battery Replacement

Replace the battery of the device

Written By: Ruofan Wang



INTRODUCTION

Details of remove the battery of Asus Chromebook Flip C100P



TOOLS:


- [JIS Driver Set](#) (1)



PARTS:


- [ASUS Chromebook C100P Battery](#) (1)

Step 1 — Battery

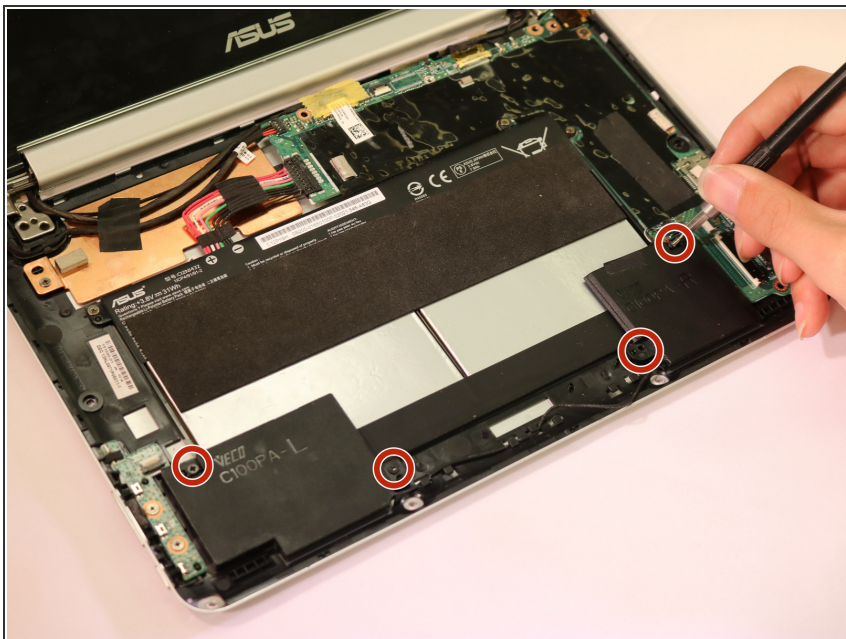


- Unscrew The 4 J1 Screws of the Audio Cards

Step 2

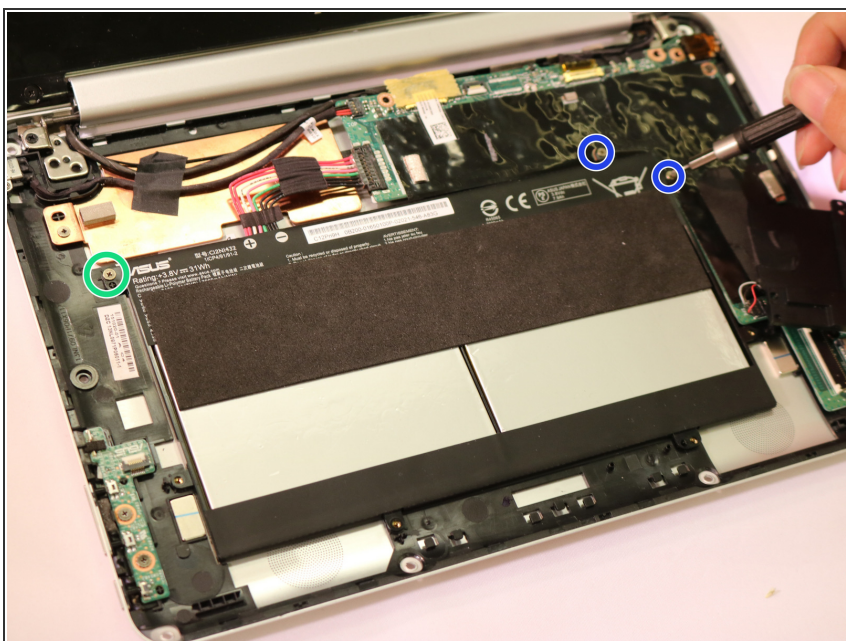

- Unscrew The 2 Battery Screws by using a screwdriver with a J00 tip.
- Unscrew The 1 Battery Screw by using a screwdriver with a J00 tip.e

Step 3

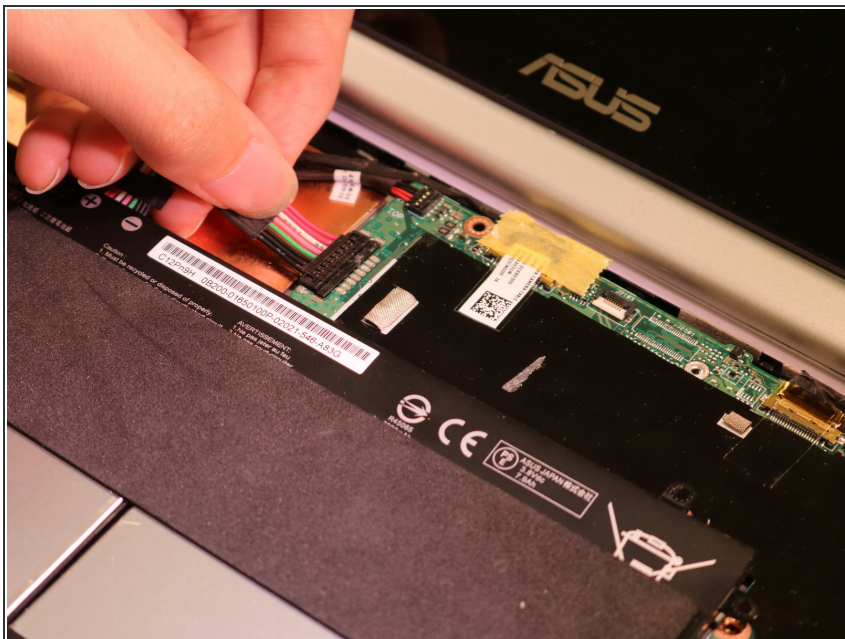

- Lift the battery cable out of Mother Board

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 02:59:31 PM.